


# SOUTHWEST CLEAN AIR AGENCY

11815 NE 99th Street, Suite 1294, Vancouver, WA 98682 - Voice 360-574-3058 - Facsimile 360-576-0925

## DEMOLITION FLOW CHART

THIS CHART APPLIES TO ALL FORMS OF DEMOLITION INCLUDING DEMOLITION BY INTENTIONAL BURNING FOR FIRE TRAINING PURPOSES

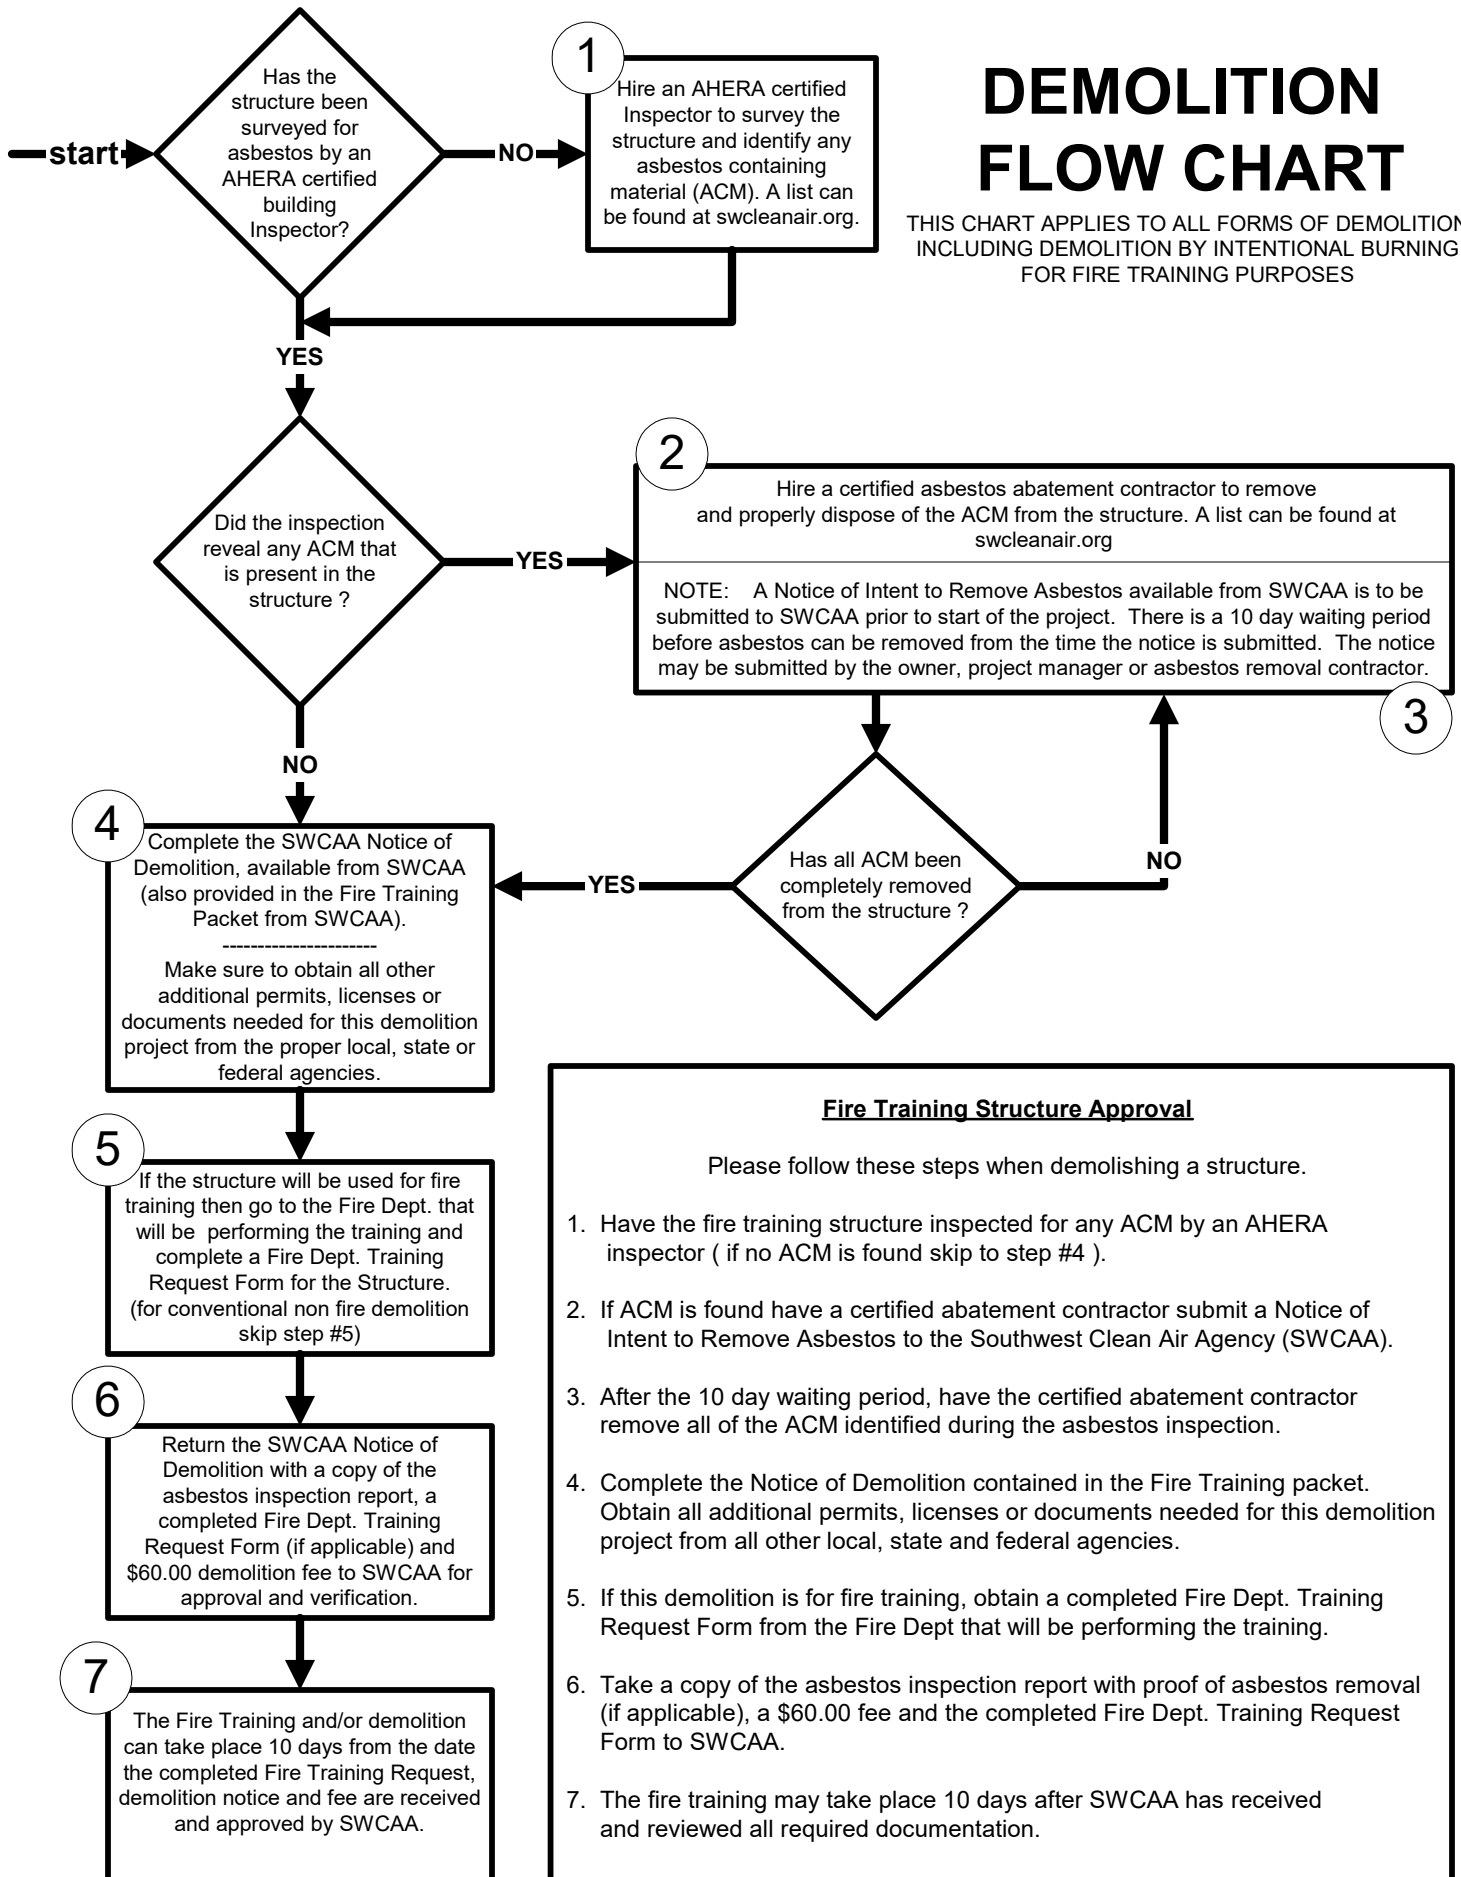

### Fire Training Structure Approval

Please follow these steps when demolishing a structure.

1. Have the fire training structure inspected for any ACM by an AHERA inspector ( if no ACM is found skip to step #4 ).
2. If ACM is found have a certified abatement contractor submit a Notice of Intent to Remove Asbestos to the Southwest Clean Air Agency (SWCAA).
3. After the 10 day waiting period, have the certified abatement contractor remove all of the ACM identified during the asbestos inspection.
4. Complete the Notice of Demolition contained in the Fire Training packet. Obtain all additional permits, licenses or documents needed for this demolition project from all other local, state and federal agencies.
5. If this demolition is for fire training, obtain a completed Fire Dept. Training Request Form from the Fire Dept that will be performing the training.
6. Take a copy of the asbestos inspection report with proof of asbestos removal (if applicable), a \$60.00 fee and the completed Fire Dept. Training Request Form to SWCAA.
7. The fire training may take place 10 days after SWCAA has received and reviewed all required documentation.